

FactoryTalk Recommended Architecture

Single FactoryTalk Application with a single WIN-911 system



What's Required?

- (1) WIN-911 License
- +
- (1) WIN-FT Add on

WIN-911

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Application.



FactoryTalk Recommended Architecture


Redundant FactoryTalk Application with a single WIN-911 system

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-FT Add on


WIN-911

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Redundant Application.

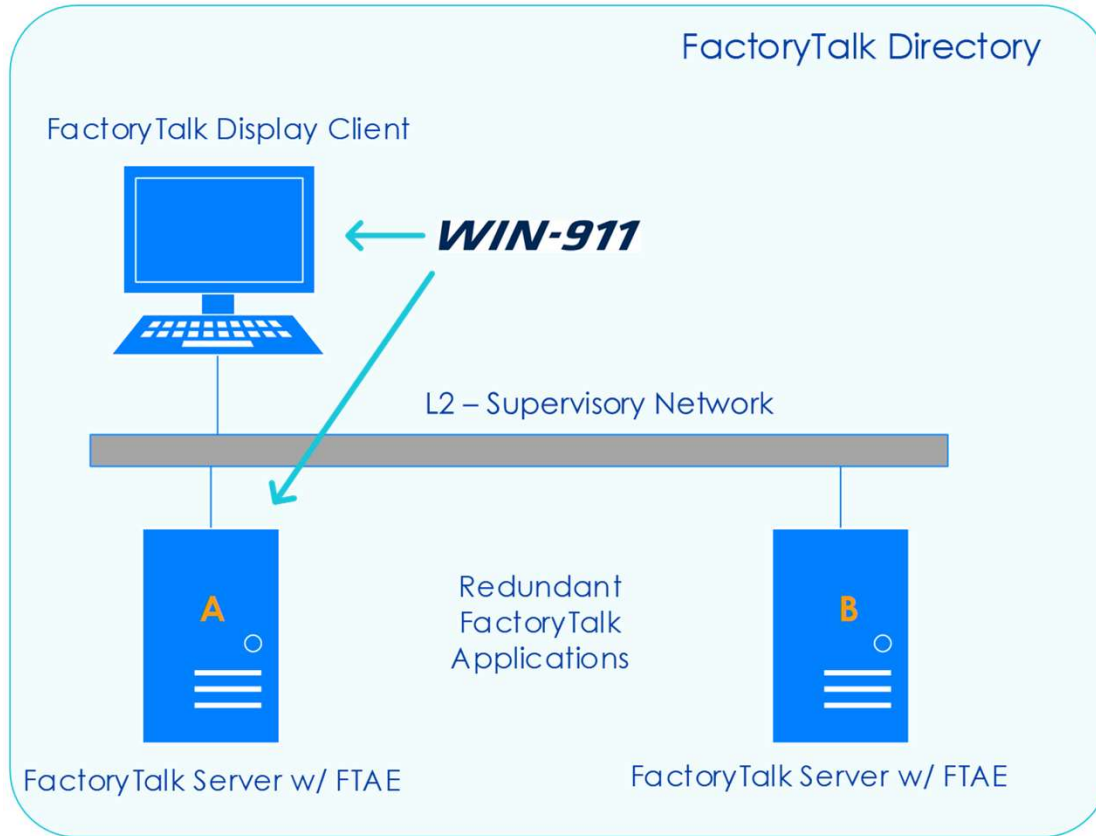

FactoryTalk Recommended Architecture

Two separate FactoryTalk Applications with a single WIN-911 system

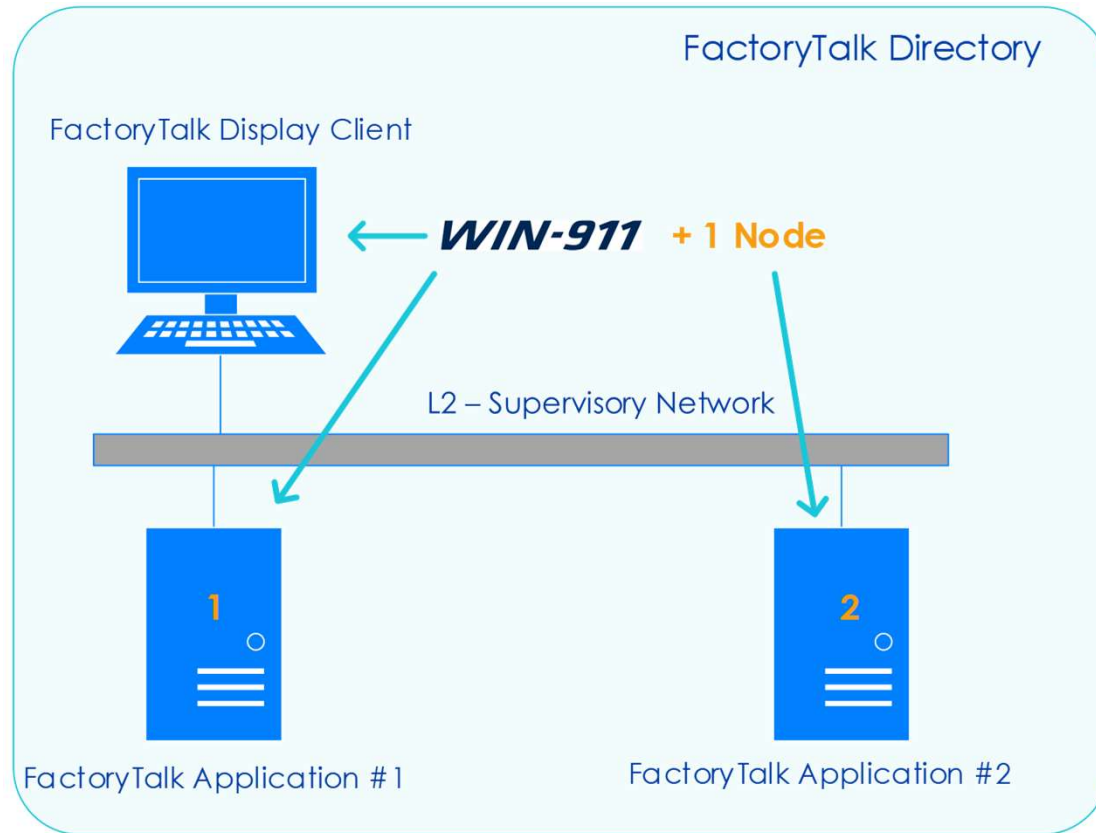

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-FT Add on
- +
- (1) WIN-Nodes

WIN-911


WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the two separate Applications.



FactoryTalk Recommended Architecture

Redundant FactoryTalk Applications with Redundant WIN-911 system

What's Required?

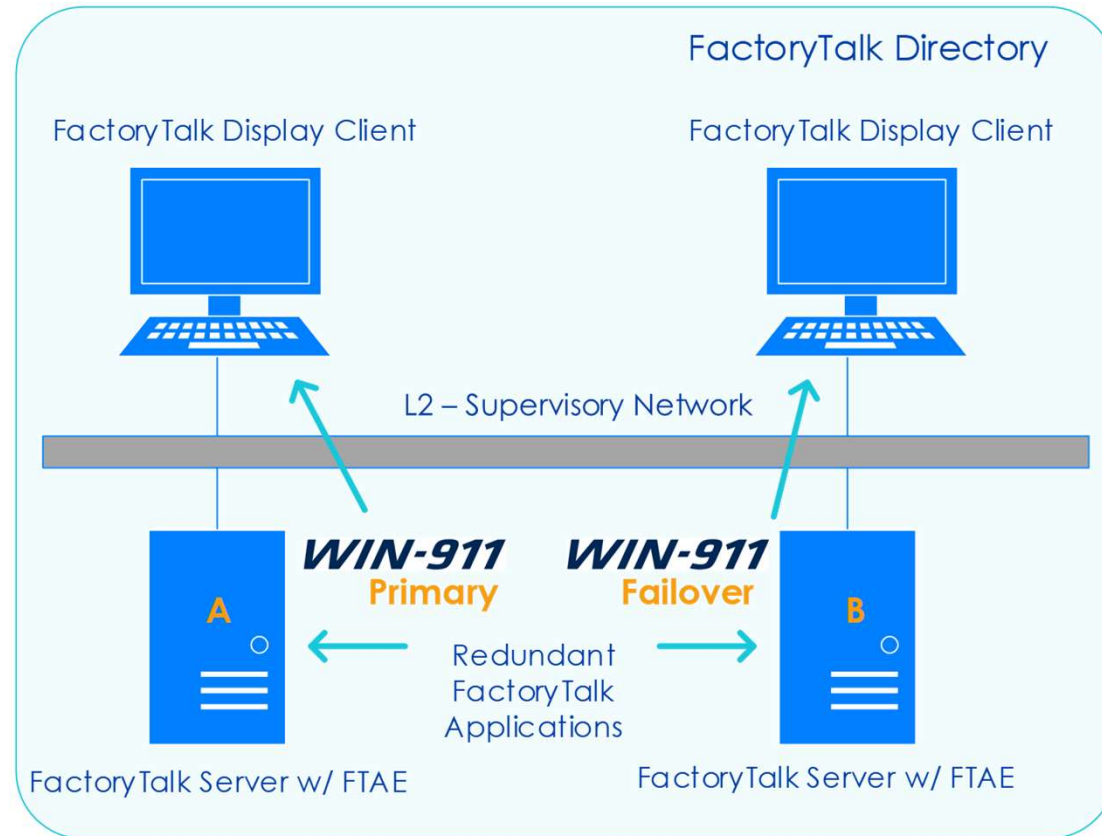

- (1) WIN-911 License
- +
- (1) WIN-FT add-on
- +
- (1) WIN-911-FO License
- +
- (1) WIN-FT-FO add-on

WIN-911

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Redundant Applications.

The WIN-911 Failover Utility runs on the Secondary system and requires a subscription license.

